


Cake Detector Assemblies

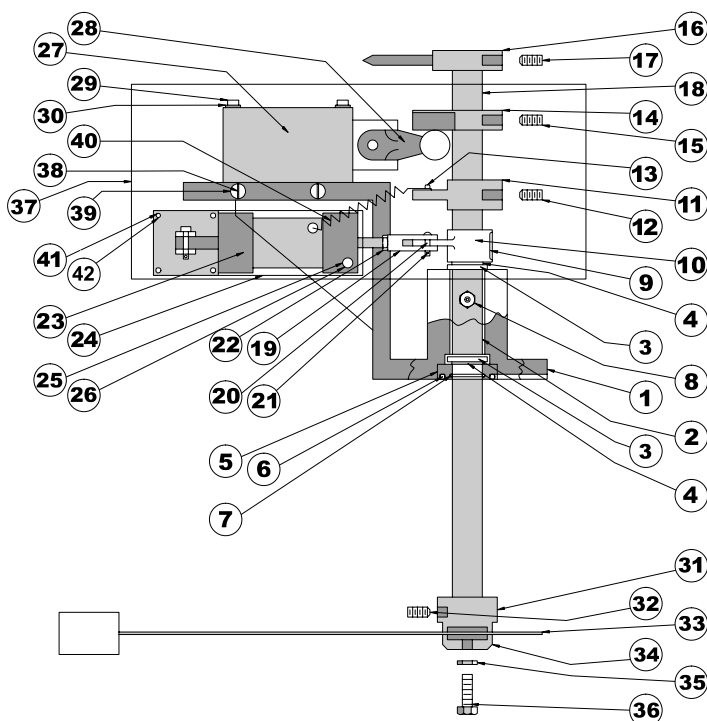

#	Description	Part Number
1	Base	0-00-00-4-F-01-A-OO
2	Bushing	0-00-00-4-F-02-A-OO
3	Support Washer	0-00-00-4-G-03-A-OO
4	Retaining Ring.....	0-00-00-4-S-04-A-OO
5	Retainer.....	0-00-00-4-P-05-A-OO
5	Retainer.....	0-00-00-4-D-05-A-OO
6	O-Ring.....	0-00-00-4-T-06-A-OO
7	O-Ring.....	0-00-00-4-V-07-A-OO
8	Grease Fitting.....	0-00-00-4-S-08-C-OO
9	Key	0-00-00-4-S-09-C-OO
10	Crank, Cylinder	0-00-00-4-F-10-A-OO
11	Spring Cam	0-00-00-4-F-11-A-OO
12	Set Screw.....	0-00-00-4-P-12-C-OO
13	Socket Head Cap Screw...	0-00-00-4-P-13-C-OO
14	Limit Valve Cam	0-00-00-4-M-13-A-OO
15	Set Screw.....	0-00-00-4-P-15-C-OO
16	Pointer.....	0-00-00-4-P-16-A-OO
17	Set Screw.....	0-00-00-4-P-17-C-OO
18	Shaft.....	0-00-00-4-P-18-A-OO
18	Shaft.....	0-00-00-4-D-18-A-OO
19	Clevis	0-00-00-4-G-19-A-OO
20	Clevis Pin.....	0-00-00-4-S-20-C-OO
21	Cotter Pin	0-00-00-4-S-21-C-OO
22	Jam Nut.....	0-00-00-4-S-22-C-OO
23	Air Cylinder.....	0-00-00-4-S-23-A-OO
24	Support Plate	0-00-00-4-C-24-A-OO

#	Description	Part Number
25	Socket Head Cap Screw...	0-00-00-4-P-25-C-OO
26	Lock Washer	0-00-00-4-P-26-C-OO
27	Limit Switch	0-00-00-4-S-27-C-OO
28	Lever Arm, L.S.	0-00-00-4-S-28-A-OO
29	Socket Head Cap Screw...	0-00-00-4-P-29-C-OO
30	Lock Washer	0-00-00-4-P-30-C-OO
31	Shaft Clamp	0-00-00-4-P-31-A-OO
31	Shaft Clamp	0-00-00-4-D-31-A-OO
32	Set Screw.....	0-00-00-4-P-32-C-OO
32	Set Screw.....	0-00-00-4-D-32-B-OO
33	Paddle	0-00-00-4-P-33-A-OO
33	Paddle.....	0-00-00-4-D-33-A-OO
34	Clamp Washer	0-00-00-4-P-34-A-OO
34	Clamp Washer	0-00-00-4-D-34-A-OO
35	Lock Washer	0-00-00-4-P-35-C-OO
35	Lock Washer	0-00-00-4-D-35-B-OO
36	Hex Head Cap Screw	0-00-00-4-P-36-C-OO
36	Hex Head Cap Screw	0-00-00-4-D-36-B-OO
37	Cover.....	0-00-00-4-O-37-B-OO
38	Screw, Round Head	0-00-00-4-P-38-C-OO
39	Lock Washer	0-00-00-4-P-39-C-OO
40	Spring.....	0-00-00-4-S-40-C-OO
41	Socket Head Cap Screw...	0-00-00-4-P-41-C-OO
42	Lock Washer	0-00-00-4-P-42-C-OO
43	Pneumatic Fitting	0-00-00-4-S-43-C-OO

